


LOW EAVE (PARAPET GUTTER)

FK2050-ABC - LOW EAVE PARAPET GUTTER

FK2050 - LOW EAVE PARAPET GUTTER

[Download the DWG file by clicking here.](#)

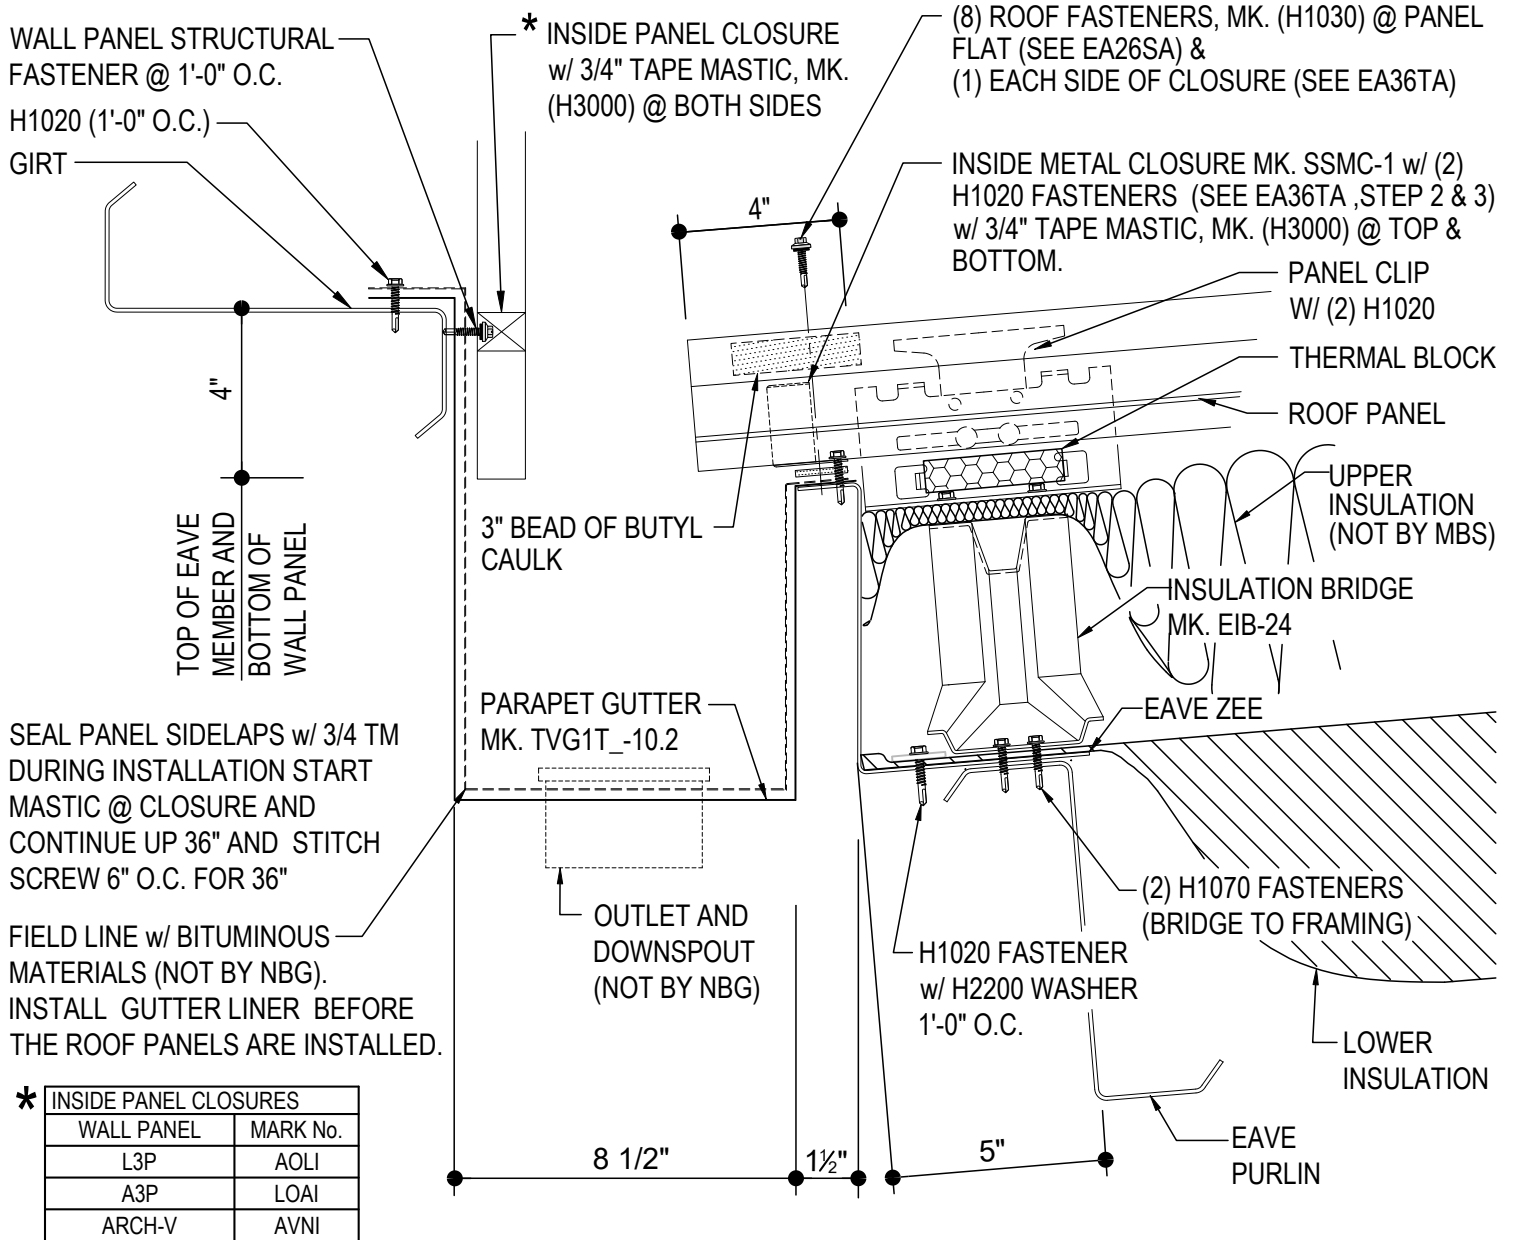

R-Boost™ PARAPET GUTTER DETAIL

R-BOOST LOW EAVE DETAIL w/ PARAPET GUTTER

FK2050